



# ASAM

Association for Standardization of  
Automation and Measuring Systems

---

## ASAM iLinkRT

High-Speed Automation Access Protocol for  
MC-Server



## Protocol Specification

Version 3.0.1

Date: 2022-06-30

## Base Standard

---

© by ASAM e.V., 2022

## **Disclaimer**

This document is the copyrighted property of ASAM e.V.  
Any use is limited to the scope described in the license terms. The license  
terms can be viewed at [www.asam.net/license](http://www.asam.net/license)

## Table of Contents

<b>Foreword</b>	<b>8</b>
<b>1 Introduction</b>	<b>9</b>
1.1 Overview .....	9
1.2 Motivation .....	9
1.3 Scope .....	10
<b>2 Relations to Other Standards</b>	<b>12</b>
2.1 Backward Compatibility to Earlier Releases .....	12
2.2 References to Other Standards .....	12
2.2.1 ASAM MCD-2 MC .....	12
2.2.2 ASAM Data types.....	12
<b>3 iLinkRT Protocol</b>	<b>13</b>
3.1 Protocol basics.....	13
3.2 iLinkRT frame message format .....	13
3.2.1 Header.....	14
3.2.1.1 Length field.....	14
3.2.1.2 Counter field (CTR) .....	14
3.2.1.3 Control Field.....	14
3.2.2 Tail.....	15
3.2.3 CTO Packet .....	15
3.2.3.1 PID field.....	15
3.2.3.2 Data field.....	15
3.2.4 DTO Packet .....	16
3.2.4.1 DID field .....	16
3.2.4.2 Timestamp field .....	16
3.2.4.3 Data field.....	17
3.3 iLinkRT Transport Layer for UDP/IP .....	17
3.3.1 Standard messages .....	17
3.3.2 Performance increase of iLinkRT Frames with DTO Packets .....	18
3.4 Communication Overview.....	18
3.4.1 Communication flow.....	18
3.4.2 Communication command sequence .....	19
<b>4 Command, Event and Data Type overview</b>	<b>20</b>
4.1 Protocol Commands .....	20
4.1.1 Command overview .....	20
4.1.2 State relations .....	23
4.2 Event codes and event code description .....	25
4.2.1 Event code overview .....	25
4.2.2 EV_CLIENT_INFORMATION.....	25
4.2.3 EV_DEVICE_CONFIGURATION_CHANGED.....	26
4.2.4 EV_DEVICE_CONNECTION .....	26

---

4.2.5	EV_ERROR .....	26
4.2.6	EV_MEASURING.....	27
4.2.7	EV_RECORDING .....	27
4.2.8	EV_SERVER .....	27
<b>4.3</b>	<b>iLinkRT Types.....</b>	<b>28</b>
4.3.1	Data Types .....	28
4.3.1.1	RT_STRING .....	28
4.3.2	Enumerations.....	28
4.3.2.1	AUTO_MEASURING_CONTROL enumeration .....	28
4.3.2.2	CHAR_TYPE enumeration for characteristics.....	28
4.3.2.3	CHAR_VALUE_TYPE enumeration for characteristics .....	29
4.3.2.4	CLIENT_ACTIVITY enumeration .....	29
4.3.2.5	CONNECTION_MODE enumeration .....	29
4.3.2.6	DAQ_LIST_LAYOUT enumeration .....	30
4.3.2.7	DATA_TYPE enumeration.....	31
4.3.2.8	FILE_DEVICE_COUNT enumeration .....	31
4.3.2.9	FORCE_OVERWRITE enumeration.....	31
4.3.2.10	MC-SERVER_STATE enumeration .....	32
4.3.2.11	MEASURING_MODE enumeration .....	32
4.3.2.12	MEASURING_STATE enumeration.....	32
4.3.2.13	PROTOCOL and COMPATIBILITY_ID enumeration .....	33
4.3.2.14	RECORDER_CONTROL enumeration .....	33
4.3.2.15	RECORDER_STATE enumeration.....	33
4.3.2.16	REP_TYPE enumeration.....	35
4.3.2.17	RETRIGGERING_FILE_CONTENT enumeration.....	35
4.3.2.18	SERVER_CONFIGURATION_MODE enumeration.....	35
4.3.2.19	TRANSFER_MODE enumeration.....	36
4.3.2.20	TRIGGER_KIND enumeration .....	36
4.3.2.21	TRIGGER_TYPE enumeration .....	36
<b>5</b>	<b>MC-Server functionalities and behavior</b>	<b>37</b>
<b>5.1</b>	<b>States .....</b>	<b>37</b>
5.1.1	Preselection of devices, measurements, and characteristic .....	39
5.1.2	Device availability .....	40
<b>5.2</b>	<b>MC-Server Configuration .....</b>	<b>40</b>
<b>5.3</b>	<b>Configuration access .....</b>	<b>44</b>
<b>5.4</b>	<b>Calibration page handling.....</b>	<b>44</b>
<b>5.5</b>	<b>Data acquisition (Measuring).....</b>	<b>44</b>
5.5.1	Data Acquisition .....	44
5.5.2	Single Client Measuring .....	44
5.5.3	Multi-Client Measuring .....	46
5.5.4	Interruption possibilities of running data acquisitions in case of reconfiguration .....	49
5.5.5	Relation between CONNECTION_MODE and MEASURING_STATE..	51
5.5.6	Handling of measuring list actualization .....	51
<b>5.6</b>	<b>Adjustment (Calibration).....</b>	<b>53</b>
<b>5.7</b>	<b>Recording .....</b>	<b>54</b>
5.7.1	Untriggered Recording .....	55
5.7.2	Triggered Recording .....	56
5.7.3	Re-triggered Recording.....	60

---

5.7.4 Relation between Measuring and Recording .....	62
<b>5.8 Watchdog.....</b>	<b>65</b>
<b>6 Detailed Description of all Commands</b>	<b>66</b>
<b>6.1 Broadcast.....</b>	<b>66</b>
6.1.1 RT_GET_ALL_SERVER .....	66
<b>6.2 Common Commands .....</b>	<b>68</b>
6.2.1 RT_GET_SERVER_STATE .....	68
6.2.2 RT_GET_SERVER_TIME .....	69
6.2.3 RT_SERVER_CONNECT .....	70
6.2.4 RT_SERVER_DISCONNECT .....	72
<b>6.3 Configuration access Commands.....</b>	<b>73</b>
6.3.1 RT_GET_CALPAGE_INFO.....	73
6.3.2 RT_GET_CHARACTERISTIC_ID_LIST .....	75
6.3.3 RT_GET_CHARACTERISTIC_INFO .....	76
6.3.4 RT_GET_DAQ_RESOLUTION_INFO .....	79
6.3.5 RT_GET_DEVICE_INFO .....	80
6.3.6 RT_GET_DEVICE_STATE .....	81
6.3.7 RT_GET_MEASUREMENT_ID_LIST .....	82
6.3.8 RT_GET_MEASUREMENT_INFO .....	83
6.3.9 RT_GET_RASTER_OVERVIEW .....	85
6.3.10 RT_GET_SELECTED_DEVICES.....	87
<b>6.4 Configuration setup Commands .....</b>	<b>88</b>
6.4.1 RT_CHANGE_DESCRIPTION_FILE .....	88
6.4.2 RT_CHANGE_HEX_FILE .....	89
6.4.3 RT_CONFIGURE_SERVER .....	90
6.4.4 RT_COPY_DATA_EXCHANGE_FILE_TO_DEVICE .....	91
6.4.5 RT_DEVICE_CONNECT .....	92
6.4.6 RT_DISTRIBUTE_EVENT .....	93
6.4.7 RT_SAVE_HEX_FILE .....	94
6.4.8 RT_SELECT_CHARACTERISTIC_ID .....	95
6.4.9 RT_SELECT_DEVICE .....	96
6.4.10 RT_SELECT_DEVICE_SET .....	97
6.4.11 RT_SELECT_MEASUREMENT_ID .....	98
<b>6.5 Data acquisition Commands .....</b>	<b>99</b>
6.5.1 RT_CLEAR_MEASURING_LIST .....	99
6.5.2 RT_CONFIGURE_MEASURING .....	100
6.5.3 RT_GET_DAQ_EVENT_INFO .....	102
6.5.4 RT_GET_DAQ_MEASUREMENT_LIST .....	103
6.5.5 RT_GET_DEVICE_DAQ_LIST .....	104
6.5.6 RT_START_STOP_MEASURING .....	105
<b>6.6 Calibration Commands .....</b>	<b>106</b>
6.6.1 RT_GET_CALPAGE .....	106
6.6.2 RT_READ_CELL_VALUES .....	107
6.6.3 RT_READ_CHARACTERISTIC .....	109
6.6.4 RT_SET_CALPAGE .....	112
6.6.5 RT_WRITE_CELL_VALUES.....	113
6.6.6 RT_WRITE_CHARACTERISTIC.....	116
<b>6.7 Recording Commands .....</b>	<b>119</b>
6.7.1 RT_ADD_KEY_VALUE_PAIR_TO_RECORDER_FILE .....	119

6.7.2	RT_CONFIGURE_RECORDER.....	120
6.7.3	RT_CONTROL_RECORDER .....	122
6.7.4	RT_GET_RETRIGGERING .....	124
6.7.5	RT_GET_TRIGGER.....	125
6.7.6	RT_SET_CLIENT_BOOKMARK .....	126
6.7.7	RT_SET_RETRIGGERING.....	127
6.7.8	RT_SET_TRIGGER .....	128
<b>6.8</b>	<b>Administrative Commands .....</b>	<b>130</b>
6.8.1	RT_EXECUTE_SERVICE.....	131
6.8.2	RT_GET_AVAILABLE_CHARACTERISTICS .....	132
6.8.3	RT_GET_AVAILABLE_DEVICE_SETS .....	133
6.8.4	RT_GET_AVAILABLE_DEVICES .....	134
6.8.5	RT_GET_AVAILABLE_MEASUREMENTS.....	135
<b>7</b>	<b>Communication error handling</b>	<b>136</b>
7.1	Error Code Handling .....	136
7.2	Error Code Overview.....	138
<b>8</b>	<b>Terms and Definitions</b>	<b>141</b>
<b>9</b>	<b>Symbols and Abbreviated Terms</b>	<b>143</b>
<b>10</b>	<b>Bibliography</b>	<b>145</b>
<b>Appendix: A.</b>	<b>MC-Clients / MC-Servers connections</b>	<b>146</b>
A.1.	Step 1: Detection of available servers .....	146
A.2.	Step2: Establish of logical communication.....	147
A.3.	Step 3: DAQ access.....	148
A.3.1.	Multicast.....	148
A.3.2.	Unicast.....	148
<b>Appendix: B.</b>	<b>Sequence of DAQ lists for measuring</b>	<b>150</b>
B.1.	DAQ Numbering .....	150
B.2.	Configuration.....	150
B.3.	Measuring start.....	151
B.4.	Data access.....	151
<b>Appendix: C.</b>	<b>Syntax of Trigger Conditions</b>	<b>153</b>
C.1.	Other restrictions .....	155
C.2.	Syntax Overview.....	155
<b>Appendix: D.</b>	<b>Codes for scaling units (CSE)</b>	<b>158</b>
<b>Appendix: E.</b>	<b>Storage of recorder data in MDF</b>	<b>160</b>
E.1.	Examples for Key Value pairs .....	160

---

<b>Appendix: F.</b>	<b>RecorderFileName Keywords</b>	<b>161</b>
Figure Directory		162
Table Directory		163

## Foreword

iLinkRT describes a multi MC-Client / multi MC-Server architecture for the purpose of fast channel based communication between MC-Servers and MC-Clients.