



Association for Standardisation of  
Automation and Measuring Systems

---

## **ASAM CEA**

Components for Evaluation and Analysis

Part 1 of 2

Version 2.2.0

Date: 2009-12-12

**Base Standard**

---

© by ASAM e.V., 2009

## **Disclaimer**

This document is the copyrighted property of ASAM e.V.  
Any use is limited to the scope described in the license terms. The license terms can be viewed at [www.asam.net/license](http://www.asam.net/license)

---

**Table of contents**

<b>1</b>	<b>Introduction</b>	<b>9</b>
1.1	<b>How to read this document?</b>	<b>9</b>
1.1.1	Structure of the document	9
1.1.2	Conventions used	10
1.2	<b>Introducing ASAM CEA</b>	<b>11</b>
1.2.1	The CEA architecture	11
<b>2</b>	<b>Deployment and use of components</b>	<b>15</b>
2.1	<b>CEA components</b>	<b>15</b>
2.1.1	Component-based development of CEA applications	15
2.1.2	Bricks-and-mortar applications	17
2.2	<b>The CEA metaphor</b>	<b>17</b>
2.2.1	Practicing CEA	18
2.2.2	Setting up a CEA application – some details	19
2.3	<b>Typical use cases</b>	<b>22</b>
2.3.1	Generic scenario	23
2.3.2	Safety testing	23
2.3.3	Durability testing	23
2.3.4	Motor and gear unit measurement	25
2.4	<b>CEA applications – modes and models</b>	<b>26</b>
2.4.1	Online vs. offline modes	26
2.4.2	Execution mode	27
<b>3</b>	<b>CEA Specification</b>	<b>29</b>
3.1	<b>Overview</b>	<b>29</b>
3.2	<b>Global functions</b>	<b>29</b>
3.2.1	Class CeaVersion	29
3.3	<b>CEA components</b>	<b>31</b>
3.3.1	Interface Component	32
3.3.2	Interface Consumer	36
3.3.3	Interface Producer	38
3.3.4	Interface VisualComponent	38
3.4	<b>CEA bus</b>	<b>40</b>
3.4.1	Interface Bus	41
3.5	<b>CEA items</b>	<b>46</b>
3.5.1	Interface Item	46
3.5.2	Interface DataItem	50
3.6	<b>CEA services</b>	<b>52</b>
3.6.1	Interface ServiceItem	52
3.6.2	Interface SystemService	52
3.6.3	Interface UndoService	55
3.6.4	Interface UnitService	55
3.6.5	Interface LogTraceService	55
3.6.6	Interface ItemSelectionService	56

	3.6.7	Interface HelpService	56
	3.6.8	Interface ItemFactoryService	57
<b>3.7</b>	<b>CEA events</b>		<b>59</b>
	3.7.1	Interface ItemEvent	59
	3.7.2	Interface ItemEventListener	59
	3.7.3	Interface ItemChangedEvent	60
	3.7.4	Interface ItemNameChangedEvent	60
	3.7.5	Interface ItemChildAddedEvent	60
	3.7.6	Interface ItemChildRemovedEvent	60
	3.7.7	Interface ItemValuesAppendedEvent	61
	3.7.8	Interface ItemPropertyChangedEvent	61
	3.7.9	Interface ItemDataChangedEvent	61
	3.7.10	Interface ItemValueReplacedEvent	61
	3.7.11	Interface ItemActionEvent	62
	3.7.12	Interface ItemReplacedEvent	62
	3.7.13	Interface ItemRevokedFromBusEvent	62
	3.7.14	Interface ItemConsumerAddedEvent	63
	3.7.15	Interface ItemConsumerRemovedEvent	63
	3.7.16	Interface ComponentEvent	63
	3.7.17	Interface ComponentEventListener	64
	3.7.18	Interface ComponentPropertyChangedEvent	64
	3.7.19	Interface ComponentNameChangedEvent	64
	3.7.20	Interface ComponentCreatedEvent	64
	3.7.21	Interface ComponentDeletedEvent	65
	3.7.22	Interface BusEventIF	65
	3.7.23	Interface BusEventListener	65
	3.7.24	Interface BusItemAvailableEvent	65
	3.7.25	Interface BusComponentAvailableEvent	66
	3.7.26	Interface PropertyChangedEvent	66
<b>3.8</b>	<b>CEA types</b>		<b>67</b>
	3.8.1	Type Cea2DataType	67
	3.8.2	Type Cea2ServiceType	67
	3.8.3	Interface UndoObject	67
	3.8.4	Interface UnitConverter	68
	3.8.5	Interface SingleItemSelector	68
	3.8.6	Interface MultipleItemSelector	69
	3.8.7	Interface ComponentDescriptor	69
	3.8.8	Interface AuthorInfo	71
	3.8.9	Interface Property	72
	3.8.10	Type Cea2ConsumerInfo	73
	3.8.11	Type Cea2VisualComponentType	73
	3.8.12	Type Cea2LogLevel	74
	3.8.13	Type Cea2LogArea	74
	3.8.14	Type Cea2URL	74
	3.8.15	Type Cea2DateTime	74
	3.8.16	Type Cea2Boundary	74
	3.8.17	Type Cea2Locale	74
	3.8.18	Type Cea2UserLanguage	75
	3.8.19	Type Cea2EventKind	75
	3.8.20	Type Cea2UUID	75
	3.8.21	Type Cea2Any	76
	3.8.22	Type Cea2Type	76
	3.8.23	Type Cea2Image	76

---

<b>3.9</b>	<b>CEA exceptions</b>	<b>76</b>
3.9.1	Generic CEA exception	76
3.9.2	Exception CustomizerNotAvailable	76
3.9.3	Exception PropertyFixed	76
3.9.4	Exception PropertyNotFound	76
3.9.5	Exception OutOfRange	77
3.9.6	Exception ListenerRejected	77
3.9.7	Exception VetoException	77
3.9.8	Exception GraphicSystemNotSupported	77
3.9.9	Exception ImproperCoordinates	77
3.9.10	Exception SecurityException	78
3.9.11	Exception ComponentNotFound	78
3.9.12	Exception ItemNotAvailable	78
3.9.13	Exception DataSourceNotFound	78
3.9.14	Exception UnsupportedDataType	78
3.9.15	Exception InvalidApplication	78
3.9.16	Exception ConversionNotSupported	79
3.9.17	Exception PlatformNotSupported	79
3.9.18	Exception PropertyRejected	79
3.9.19	Exception CapacityExceeded	79
3.9.20	Exception TargetInvocation	79
<b>The CEA file format</b>		<b>81</b>
<b>3.10</b>	<b>CEA descriptor</b>	<b>81</b>
3.10.1	The descriptor XSD	81
3.10.2	Example	84
<b>4</b>	<b>CEA component categories</b>	<b>85</b>
<b>A</b>	<b>Glossary</b>	<b>87</b>
Index		89
CEA interfaces		89
CEA operations		89
CEA types		91
CEA exceptions		91
Figuredirectory		93
Books		95