



ASAM

Association for Standardisation of
Automation and Measuring Systems

ASAM MCD-1 (XCP)

Universal Measurement and Calibration
Protocol

Protocol Layer Specification

Version 1.4.0

Date: 2017-07-01

Base Standard

© by ASAM e.V., 2017

Disclaimer

This document is the copyrighted property of ASAM e.V.
Any use is limited to the scope described in the license terms. The license terms can be viewed at www.asam.net/license

Table of Contents

<u>1</u>	<u>Foreword</u>	<u>9</u>
<u>2</u>	<u>Introduction</u>	<u>10</u>
<u>3</u>	<u>Relations to Other Standards</u>	<u>11</u>
3.1	Backward Compatibility to Earlier Releases	11
3.1.1	The XCP Protocol Layer Version Number	11
3.1.2	The Compatibility Matrix	11
3.2	References to other Standards	12
3.2.1	CCP and XCP	12
<u>4</u>	<u>XCP Features And Concepts</u>	<u>13</u>
4.1	Synchronous Data Transfer	13
4.1.1	DAQ, STIM and ODT	13
4.1.2	ODT Entry	13
4.1.3	Object Descriptor Table	14
4.1.4	DAQ List	14
4.1.5	Event Channels	15
4.1.6	Dynamic DAQ Configuration	17
4.1.7	DAQ Configuration Storing and Power-up Data Transfer	22
4.1.7.1	DAQ Configuration Storing Without Power-up Data Transfer	22
4.1.7.2	DAQ Configuration Storing With Power-up Data Transfer (RESUME Mode)	23
4.1.8	DAQ List Prioritization	25
4.1.9	ODT Optimization	25
4.1.10	DAQ Packed Mode	27
4.1.10.1	DAQ List Behavior	28
4.1.10.2	Event Channel	28
4.1.10.3	Timestamps	28
4.1.10.4	Error Handling	29
4.1.11	Bitwise Stimulation	29
4.1.12	Synchronous Data Acquisition	30
4.1.13	Synchronous Data Stimulation	31
4.2	Measurement Modes	33
4.2.1	Polling	33
4.2.2	Synchronous Data Transfer, DAQ direction, Burst, Standard	34
4.2.3	Synchronous Data Transfer, DAQ direction, Burst, Improved	35
4.2.4	Synchronous Data Transfer, DAQ direction, Alternating	36
4.3	Bypassing	37
4.3.1	Delayed Bypassing	37
4.3.2	Bypass Activation	37
4.3.3	Bypassing Startup	38
4.3.4	Plausibility Checks	38
4.3.5	Bypassing Consistency	38
4.3.5.1	Event Channel Relations	38
4.3.5.2	DTO CTR Event Channel Properties	39
4.3.5.3	DTO CTR Field	40

4.3.5.4	4.3.5.5	4.3.6	41
			41
			46
4.4	Online Calibration		47
4.4.1	SECTOR, SEGMENT and PAGE		47
4.4.2	Logical Layout: SEGMENT		48
4.4.3	Accessibility - PAGE		48
4.4.4	Calibration Data Page Switching		49
4.4.5	Calibration Data Page Freezing		50
4.4.6	Addressing Action		50
4.4.7	Master-Slave Action		51
4.4.8	Page-Page Action		51
4.5	Flash Programming		51
4.5.1	Physical Layout: SECTOR		51
4.5.2	General		52
4.5.3	Absolute Access Mode - Access by Address		53
4.5.4	Functional Access Mode - Access by Flash Area		53
4.5.5	Checksum Control and Program Verify		55
4.5.6	End of Flash Session		55
4.6	Time Correlation		55
4.6.1	Introduction		55
4.6.2	XCP Slave's Clock Subsystem		57
4.6.2.1	Scenario 1: one observable clock - free running XCP slave clock		57
4.6.2.2	Scenario 2: one observable clock - single XCP slave clock, synchronized to a grandmaster clock		58
4.6.2.3	Scenario 3: one observable clock - single XCP slave clock, syntonized to a grandmaster clock		59
4.6.2.4	Scenario 4: two observable clocks - free running XCP slave clock combined with a globally synchronized clock		60
4.6.2.5	Scenario 5: two observable clocks - free running XCP slave clock combined with an ECU clock		62
4.6.2.6	Scenario 6: three observable clocks		65
4.6.2.7	Scenario 7: ECU clock only		65
4.7	ECU States		66
4.7.1	Introduction		66
4.7.2	Transferring the State Information to the XCP Master		67
4.7.3	A2L Semantic Consistency		68
5	The XCP Protocol		69
5.1	Topology		69
5.2	The XCP Communication Models		70
5.2.1	The Standard Communication Model		70
5.2.2	The Block Transfer Communication Model		71
5.2.3	The Interleaved Communication Model		72
5.3	State Machine		73
5.4	Protection Handling		76
5.5	The XCP Message (Frame) Format		77
6	The Limits of Performance		78
6.1	Generic Performance Parameters		78
6.2	DAQ/STIM Specific Performance Parameters		78

6.2.1	DAQ Specific Parameters	79
6.2.2	STIM Specific Parameters	80
6.2.3	ECU Resource Consumptions	80
6.2.3.1	ECU RAM Consumption	80
6.2.3.2	CPU Execution Time	82
7	The XCP Protocol Layer	89
7.1	The XCP Packet	89
7.1.1	The XCP Packet Types	89
7.1.2	The XCP Packet Format	90
7.1.2.1	The Identification Field	90
7.1.2.2	The Counter Field	94
7.1.2.3	The Timestamp Field	95
7.1.2.4	The Data Field	97
7.1.3	The CTO Packets	97
7.1.3.1	Command Packet	97
7.1.3.2	Command Response Packet	98
7.1.3.3	Error Packet	98
7.1.3.4	Event Packet	98
7.1.3.5	Service Request Packet	99
7.1.4	The DTO Packets	99
7.1.4.1	Data Acquisition Packet	100
7.1.4.2	Synchronous Data Stimulation Packet	100
7.1.5	The XCP Packet Identifiers	100
7.1.5.1	Master -> Slave	101
7.1.5.2	Slave -> Master	101
7.2	Event Codes	101
7.3	Service Request Codes	102
7.4	Command Codes	103
7.5	Description of Commands	105
7.5.1	Standard Commands	107
7.5.1.1	Set up Connection With Slave	107
7.5.1.2	Get Version Information	111
7.5.1.3	Disconnect From Slave	112
7.5.1.4	Get Current Session Status From Slave	113
7.5.1.5	Synchronize Command Execution After Timeout	117
7.5.1.6	Get Communication Mode Info	118
7.5.1.7	Get Identification From Slave	120
7.5.1.8	Request to Save to Non-volatile Memory	122
7.5.1.9	Get Seed for Unlocking a Protected Resource	125
7.5.1.10	Send Key for Unlocking a Protected Resource	127
7.5.1.11	Set Memory Transfer Address in Slave	130
7.5.1.12	Upload From Slave to Master	131
7.5.1.13	Upload From Slave to Master (short version)	133
7.5.1.14	Build Checksum Over Memory Range	134
7.5.1.15	Refer to Transport Layer Specific Command	137
7.5.1.16	Refer to User-defined Command	138
7.5.2	Calibration Commands	139
7.5.2.1	Download From Master to Slave	139
7.5.2.2	Download From Master to Slave (Block Mode)	141
7.5.2.3	Download From Master to Slave (Fixed Size)	143
7.5.2.4	Download From Master to Slave (Short Version)	144
7.5.2.5	Modify Bits	145
7.5.3	Page Switching Commands	146

7.5.3.1	Set Calibration Page	146
7.5.3.2	Get Calibration Page	147
7.5.3.3	Get General Information on PAG Processor	148
7.5.3.4	Get Specific Information for a SEGMENT	149
7.5.3.5	Get Specific Information for a PAGE	152
7.5.3.6	Set Mode for a SEGMENT	156
7.5.3.7	Get Mode for a SEGMENT	157
7.5.3.8	Copy Page	158
7.5.4	Data Acquisition and Stimulation Commands	159
7.5.4.1	Set Pointer to ODT Entry	159
7.5.4.2	Write Element in ODT Entry	160
7.5.4.3	Set Mode for DAQ List	161
7.5.4.4	Start/Stop/Select DAQ List	164
7.5.4.5	Start/Stop DAQ Lists (Synchronously)	166
7.5.4.6	Write Multiple Elements in ODT	167
7.5.4.7	Set DAQ List Packed Mode	169
7.5.4.8	Get DAQ List Packed Mode	171
7.5.4.9	Read Element From ODT Entry	172
7.5.4.10	Get DAQ Clock From Slave	173
7.5.4.11	Get General Information on DAQ Processor	175
7.5.4.12	Get General Information on DAQ Processing Resolution	181
7.5.4.13	Get Mode From DAQ List	184
7.5.4.14	Get Specific Information for an Event Channel	186
7.5.4.15	DTO CTR Properties	190
7.5.4.16	Clear DAQ List Configuration	195
7.5.4.17	Get Specific Information for a DAQ List	196
7.5.4.18	Clear Dynamic DAQ Configuration	198
7.5.4.19	Allocate DAQ Lists	199
7.5.4.20	Allocate ODTs to a DAQ List	200
7.5.4.21	Allocate ODT Entries to an ODT	201
7.5.5	Non-Volatile Memory Programming	202
7.5.5.1	Indicate the Beginning of a Programming Sequence	202
7.5.5.2	Clear a Part of Non-volatile Memory	204
7.5.5.3	Program a Non-volatile Memory Segment	206
7.5.5.4	Indicate the End of a Programming Sequence	208
7.5.5.5	Get General Information on PGM Processor	209
7.5.5.6	Get Specific Information for a SECTOR	212
7.5.5.7	Prepare Non-volatile Memory Programming	214
7.5.5.8	Set Data Format Before Programming	215
7.5.5.9	Program a Non-volatile Memory Segment (Block Mode)	217
7.5.5.10	Program a Non-volatile Memory Segment (fixed size)	218
7.5.5.11	Program Verify	219
7.5.6	Time Correlation	220
7.5.6.1	Time Correlation Properties	220
7.6	Communication Error Handling	236
7.6.1	Definitions	236
7.6.1.1	Error	236
7.6.1.2	Pre-Action	236
7.6.1.3	Action	236
7.6.1.4	Error Severity	236
7.6.2	Timeout Handling	237
7.6.2.1	Standard Communication Model	237
7.6.2.2	Block Communication Model	238
7.6.2.3	Interleaved Communication Model	239
7.6.2.4	Time-Out Manipulation	239
7.6.3	Error Code Handling	240
7.7	Description of Events	256
7.7.1	Start in Resume Mode	256
7.7.2	End of DAQ Clearing	257

7.7.3	End of DAQ Storing	258
7.7.4	End of CAL Storing	258
7.7.5	Request to Restart Time-out Detection	258
7.7.6	Indication of DAQ Overload	258
7.7.7	Indication of Autonomous Disconnect	259
7.7.8	Transfer of Timestamp and Synchronization	259
7.7.9	Indication of Timeout at STIM	265
7.7.10	Entering Sleep Mode	265
7.7.11	Leaving Sleep Mode	267
7.7.12	ECU State Changed	267
7.7.13	User-defined Event	267
7.7.14	Transport Layer Specific Event	268
8	<u>Interface to ASAM MCD-2 MC Description File</u>	<u>269</u>
8.1	Overview	269
8.2	ASAM MCD-2 MC AML for XCP (Common_Parameters)	270
8.2.1	Protocol Layer and Transport Layer Parts (XCP_definitions.aml)	270
8.2.2	Combining the Parts to an XCP Communication Stack (XCP_vX_Y.aml)	270
8.2.2.1	Structure of an IF_DATA "XCP"	271
8.2.2.2	Structure of an IF_DATA "XCPplus"	271
8.2.2.3	ASAM MCD-2 MC Description File Containing an IF_DATA "XCP" and "XCPplus"	272
8.3	Example ASAM MCD-2 MC	272
8.3.1	Example of IF_DATA XCPplus	272
8.3.2	Example A2L File	273
8.4	Consistency Between ASAM MCD-2 MC and Slave	273
9	<u>Interface to an External Seed&Key Function</u>	<u>274</u>
9.1	Function XCP_GetAvailablePrivileges	274
9.2	Function XCP_ComputeKeyFromSeed	275
10	<u>Interface to an External Checksum Function</u>	<u>276</u>
11	<u>Interface to an External A2L Decompression/Decrypting Function</u>	<u>277</u>
12	<u>Examples</u>	<u>278</u>
12.1	Configuration Examples	278
12.2	Examples for GET_ID Identification Strings	278
12.3	Example Communication Sequences	278
12.3.1	Setting up a Session	279
12.3.2	Calibrating	282
12.3.3	Synchronous Data Transfer	284
12.3.3.1	Getting Information About the Slave's DAQ List Processor	284
12.3.3.2	Preparing the DAQ Lists	286
12.3.3.3	Configuring the DAQ Lists	287
12.3.3.4	Starting the Data Transfer	288
12.3.3.5	Stopping the Data Transfer	289

12.3.3.6 Preparing a DAQ List for Packed Mode	289
12.3.4 Reprogramming the Slave	290
12.3.5 Closing a Session	291
12.3.6 Time Correlation	292

13 Symbols and Abbreviated Terms **299**

14 Bibliography **301**

Figure Directory	302
Table Directory	304

1 FOREWORD

XCP is short for Universal Measurement and Calibration Protocol. The main purpose is the data acquisition and calibration access from electronic control units. Therefore a generic protocol layer is defined. As transport medium different physical busses and networks can be used. For each authorized transport medium a separate transport layer is defined. This separation is reflected in standard document structure, which looks like follows:

- One Base Standard
- Associated Standards for each physical bus or network type

The Base standard describes the following content:

- Protocol Layer
- Interface to ASAM MCD-2 MC
- Interface to an external SEED&KEY function
- Interface to an external Checksum function
- Interface to an external A2L Decompression/Decrypting function
- Example Communication sequences

For each transport layer exist an own associated standard. For the version in hand the following transport layers are defined

- XCP on CAN
- XCP on Ethernet (TCP/IP, UDP/IP)
- XCP on Sxl (SPI, SCI)
- XCP on USB
- XCP on FlexRay

The "X" inside the term XCP generalizes the "various" transportation layers that are used by the members of the protocol family. Because XCP is based on CCP the "X" shall also show that the XCP protocol functionality is extended compared to CCP.